

HF-A11-SMT PHY-PHY Application

Please refer to user manual 1.3.2.2 for the PHY-PHY application. But first need to configure the module first.

- 1、 AT+FEPHY=on //Enable module Ethernet function
- 2、 AT+FEPTP=on //Enable module PHY-PHY function.
- 3、 AT+Z //Reset the module and make the above setting valid.

Note

1. The TX/RX data line should be cross coupling. The customer PHY(TX+,TX-,RX+,RX-) should be pulled up to VCC_PHY.
2. The PHYchip should set to 100M work mode.